


INSTALLATION INSTRUCTIONS FOR EMERGENCY EXIT SIGN

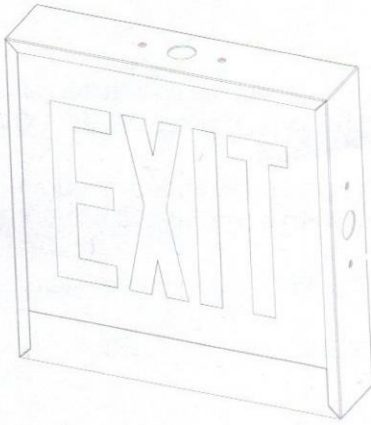

IMPORTANT:

When relamping, only use lamps specified in the exit sign. Using other lamp types may result in damage or unsafe conditions.


IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed, including the following:


READ AND FOLLOW ALL SAFETY INSTRUCTION

1. Do not use outdoors.
2. Do not mount near gas or electric heaters.
3. Equipment should be mounted in locations and at heights where it will not be subject to tampering by unauthorized personnel.
4. The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
5. Do not use this equipment for other than its intended use.
6. Before wiring to power supply, turn off electricity at fuse or circuit breaker.
7. Consult local building code for approved wiring and installation.
8. Installation and servicing should be performed by qualified personnel.

SAVE THESE INSTRUCTION

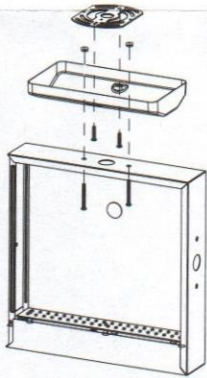


(Figure 1)

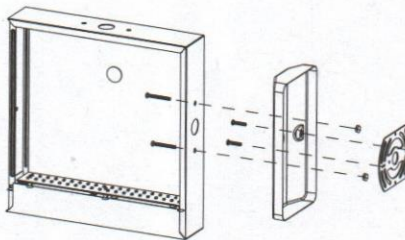


(Figure 2)

Wiring Diagram

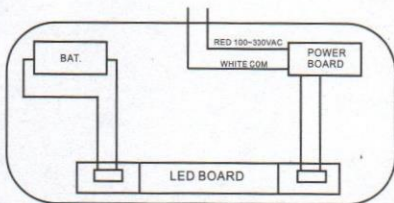

BATTERY BACKUP

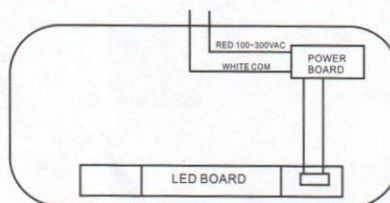

AC ONLY

NOTE:

Properly insulate the unused lead with a wire nut or other approved means

WARNING:

Unused wires must be capped using enclosed wire nuts.

INSTALLATION INSTRUCTIONS

CEILING or END WALL MOUNT(FIG.1)&(FIG.2)

1. Slide out front exit panel face plate & lens/filter by removing the screw on the bottom of the unit.
2. Remove the (3) K/O 's in either the side (for end wall mount) or top (for ceiling mount) of the fixture that line up with the same holes on the CANOPY/J-BOX COVER. Note: FOR CEILING MOUNT, you must remove the INTERNAL TRANSFORMER COVER on the inside top of the fixture. Please re-insert after installation.
3. Using the (2) 1/2" long 8-32 screws and lock nuts, attach the canopy to the proper area of the exit sign(as shown in figure 1).
4. Determine if ROUND ADAPTER PLATE will be needed for proper orientation of the exit sign. If it is needed, install it now with the remaining (2) 1/2" long 8-32 screws .
5. Mount sign to the J-BOX using the (2) 1-1/2 " long 8-32 screws , making sure to route the AC SUPPLY wires into the fixture. Use of the included 20 " jumper wires if needed for this step.
6. Connect AC Supply wires to fixture input wires. RED is for 100~300 Volt, WHITE is the COMMON.
7. Replace front panel and red lens and secure with bottom screw.

BACK MOUNTING

1. Slide out front exit panel face plate & lens/filter by removing the screw on the bottom of the unit.
2. Determine which mounting holes will be used to mount fixture to J-BOX, then punch out proper K/O 's from the K/O pattern on the back panel of the housing.
3. Mount sign to the J-BOX using the (2) 1-1/2 " long 8-32 screws, making sure to route the AC SUPPLY wires into the fixture. Use the included 20 " jumper wires if needed for this step.
4. Connect AC Supply wires to fixture input wires. RED is for 100~300 Volt, WHITE is the COMMON.
5. Replace front panel and red lens and secure with bottom screw.