 


# INSTALLATION INSTRUCTIONS FOR EMERGENCY EXIT SIGN

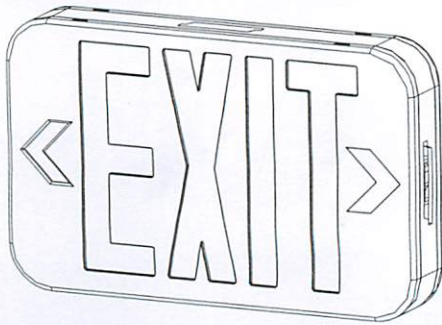

## IMPORTANT:

When relamping, only use lamps specified in the exit sign. Using other lamp types may result in transformer damage or unsafe conditions.

Battery in this unit may not be fully charged.

After electricity is hooked up to unit, let the battery charge up for at least 24 hours.

Then normal operation of this unit should take effect.

## IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed, including the following:

### READ AND FOLLOW ALL SAFETY INSTRUCTIONS

 
- 1) Do not use outdoors.
- 2) Do not mount near gas or electric heaters.
- 3) Use caution when handling batteries. Avoid possible shorting.
- 3) Equipment should be mounted in locations and at heights (MAX: 8ft) where it will not be subject to tampering by unauthorized personnel.
- 5) The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
- 6) Do not use this equipment for other than its intended use.
- 7) Before wiring to power supply, turn off electricity at fuse or circuit breaker.
- 8) Consult local building code for approved wiring and installation.
- 9) Installation and servicing should be performed by qualified personnel.

## SAVE THESE INSTRUCTIONS INSTALLATION INSTRUCTIONS

### CEILING & END MOUNTING (FIG.1) & (FIG.2).

- 1) Connect input as shown in wiring diagram below and fasten canopy to J-box bracket.
- 2) Snap housing to canopy.
- 3) Secure faceplate to housing and remove the proper arrow as required.

### Wiring diagram

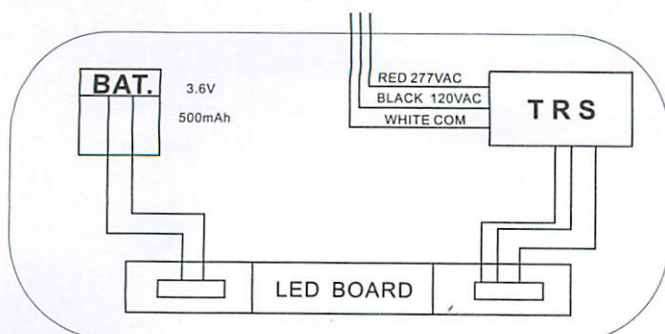

(FIG.1)



(FIG.2)

### WARNING:

Unused wires must be capped using enclosed wire nuts.